

OWNER'S MANUAL

RGBW LED Light Remote
Item # 652699

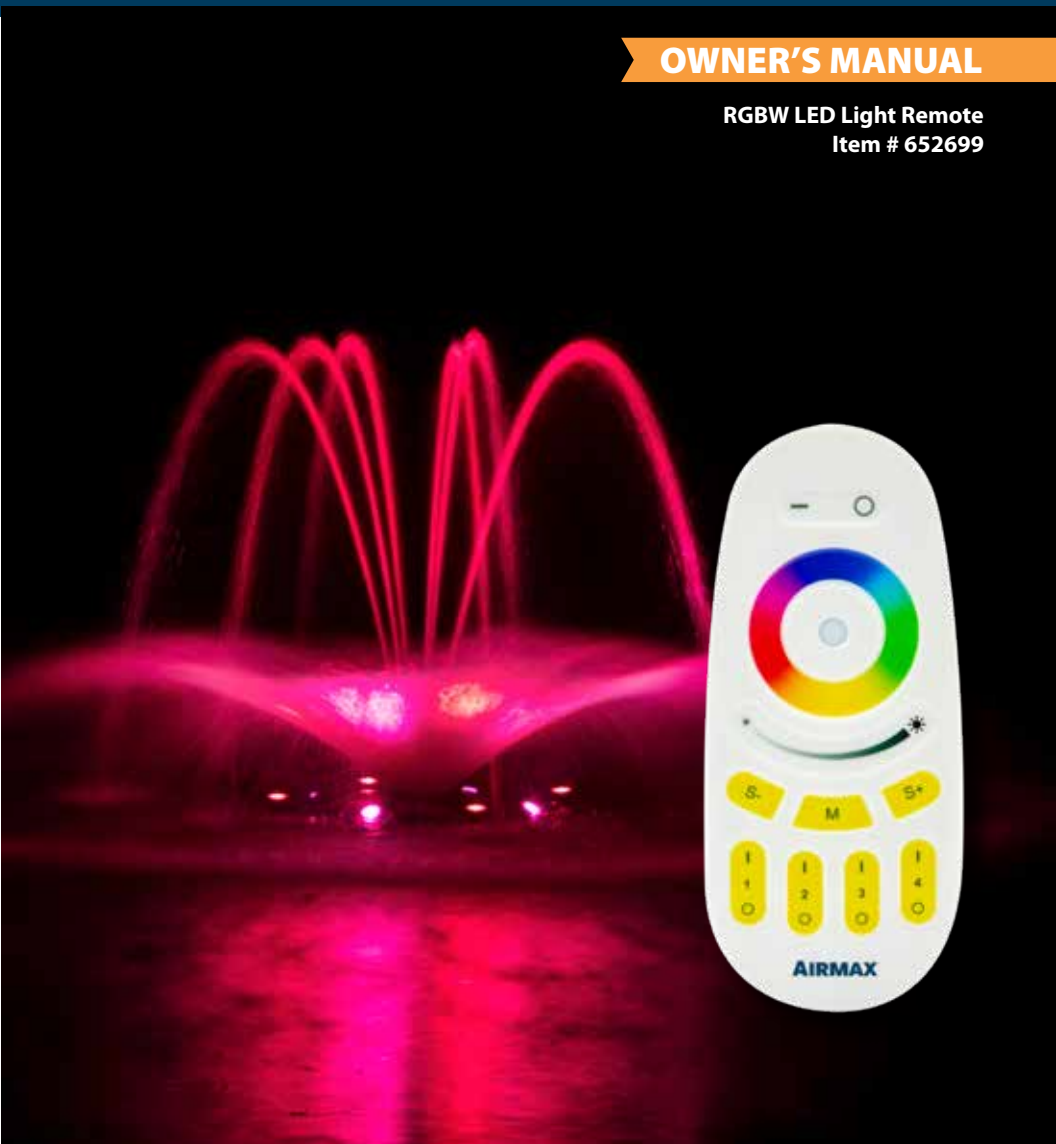


Table of Contents:

Important Information	2	Maintenance	4
Technical Specs	2	Warranty Information	4
Pairing & Using Your Remote	3		

IMPORTANT INFORMATION

Please read these instructions thoroughly before use. Failure to follow instructions may result in equipment damage or failure, losses, injury or death.

▲ CAUTION ▲

To reduce the risk of equipment damage or failure:


- During freezing temperatures, remove and store inside.

IMPORTANT: Airmax, Inc. is not responsible for equipment damage or failure, losses, injury or death resulting from failure to follow safety precautions, misuse or abuse of equipment.

TECHNICAL SPECS

The Airmax Color-Changing RGBW LED Light Set is run by a wireless remote with a range of up to 200ft. The wireless remote allows you to change the color, dim/brighten the lights, control flash/fade speed and run up to 9 preset programs.

Requires: 2 AAA Batteries (Included).

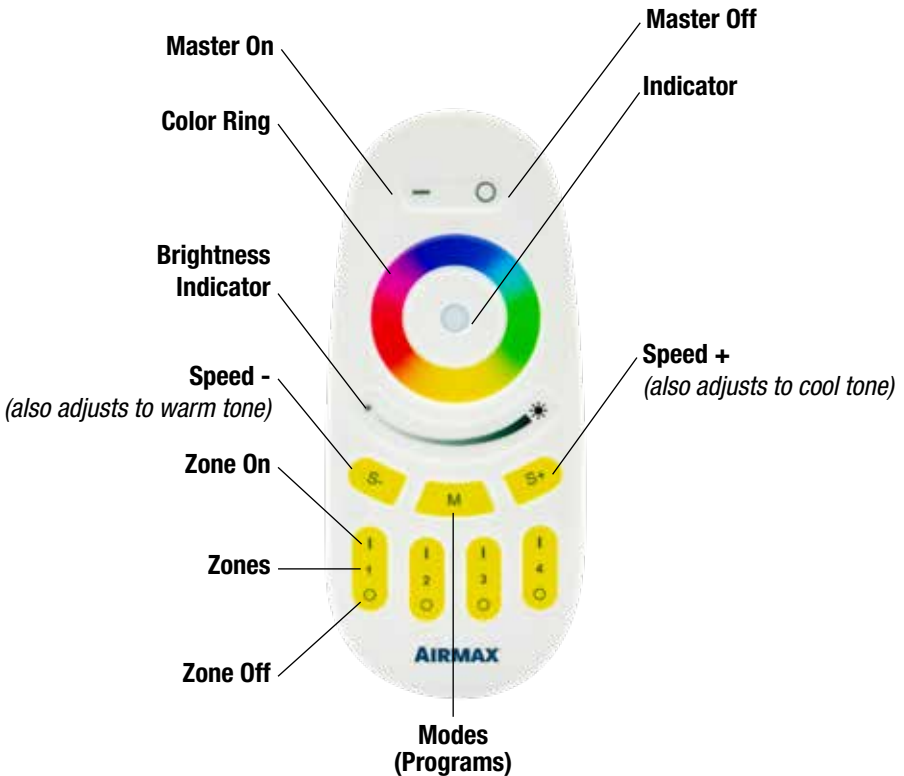

PAIRING YOUR REMOTE & FOUNTAIN

Step 1 Ensure that you have new batteries in your remote and that the light set you wish to pair is within the 200' working range of the remote control. Depending on conditions, you may have to decrease the distance between the lights and the remote during the re-pairing process.

Step 2 Choose which zone you want to assign the lights (1 to 4).

Step 3 Switch off the main power supply of the lights in the selected zone with the main switch or pull the plug from the socket. For digital timers, turn to MANUAL OFF.

Step 4 Switch the lights on again and within 3 seconds, TAP Zone On button three times on the remote control.

Step 5 When the link operation is successful, the lights will flash GREEN two times then reset to RED.

BASIC CONTROL FUNCTIONS

- Press and Hold Master ON or ZONE ON for several seconds to turn all lights to white mode.
- Touch the color ring to adjust lights to any color.
- While in white or solid color mode, use the speed buttons to change the tone from cool to warm white or vibrant to pastel colors.
- Change the brightness by using the brightness slider.
- Adjust flash/fade speed for any preset program using the speed buttons.

Preset Programs/Modes

Press the "M" Mode button to scroll through the pre-programmed light settings.

Program 1 - Color Flash & Freeze multiple flash and freeze sequences of all colors.

Program 2 - Color Fades red, orange, yellow, green, blue, pink, one after the other.

Program 3 - Color Fades green, blue, pink, one after the other.

Program 4 - Color Fades green, blue, purple, pink, one after the other.

Program 5 - Color Fades red, orange, yellow, green, pink, blue, one after the other.

Program 6 - Color Fades red, white, blue, one after the other.

Program 7 - Color Fades white, pink blue, one after the other.

Program 8 - Color Fades white, green, blue, red, one after the other.

Program 9 - Color Fades blue, green, yellow, pink, red, purple, one after the other.

MAINTENANCE

- Remote should be stored within 200' of the light set to prevent un-pairing and to avoid depletion of battery life.
- Replace batteries as needed.
- Store indoors during freezing temperatures

WARRANTY

Airmax RGBW LED Light Remotes carry a 1-year warranty. Airmax will repair or replace any remote found to be defective. This limited warranty is extended exclusively to the original purchaser and begins from the date of original shipment. Abuse, misuse or alterations of this product void all warranty. Please contact your local dealer to obtain a Return Merchandise Authorization (RMA) number prior to returning any product. Failure to request an RMA number may result in delay or dismissal of your warranty claim.

**THANK YOU FOR CHOOSING:
Airmax, Inc.**

15425 Chets Way Street, Armada, MI 48005
866-424-7629 | www.airmaxeco.com | contactus@airmaxeco.com

#651138 V3