

INSTALLATION INSTRUCTIONS



- Camlock Connector Kit (Item #510435)

Provides fast and easy connections between compressor hoses and underground airlines on PondSeries® and LakeSeries® Aeration Systems.



Table of Contents:

Important Information	2	Replacement Parts	4
Getting to Know Your Camlock Connector Kit	2	Product Warranty	4
Installing Your Camlock Connector Kit	3		

IMPORTANT INFORMATION:

Please read these instructions thoroughly before use. Failure to follow instructions may result in equipment damage or failure, losses, injury or death.

⚠ **WARNING:** ⚠

To reduce the risk of electric shock or injury:

- ALWAYS unplug the compressor from the power source and release pressure from the airlines before installing, removing or servicing the Camlock Connector Kit components.

IMPORTANT: Airmax® is not responsible for equipment damage or failure, losses, injury or death resulting from failure to follow safety precautions, misuse or abuse of equipment.

GETTING TO KNOW YOUR CAMLOCK CONNECTOR KIT:



What's Included:

- A** 2 - 1" Stainless Hose Clamps
- B** 1/2" Camlock - Female End
- C** 2 - 3/8" Insert Adapter
- D** 5/8" Insert Adapter
- E** 1/2" Camlock - Male End

One Camlock Connector Kit will be needed for each airline connection between the manifold flex tubes and underground airline runs.


INSTALLING YOUR CAMLOCK CONNECTOR KIT:

Tools Required:


5/16" Nut Driver or
Flathead Screwdriver
Teflon Tape




- 1 Install Female End of Camlock**
Apply teflon tape to the threads of a 3/8" insert adapter, then thread the adapter into the female Camlock and tighten securely. Next, slide a hose clamp onto the blue flex tube and insert the barbed end into the flex tube. Using a nut driver or flathead screwdriver, tighten the hose clamp onto the Insert adapter.

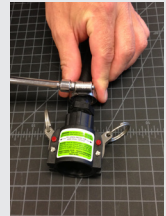

- 2 Install Male End of Camlock**
Select either the 3/8" OR 5/8" insert adapter based on the size of your weighted or direct burial airline. Apply teflon tape to the threads of the adapter, thread it into the male Camlock, and tighten securely. Slide a hose clamp onto the airline, and insert the barbed end into the airline. Using a nut driver or flathead screwdriver, tighten the hose clamp onto the insert adapter.

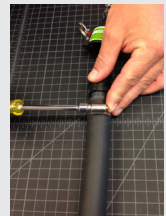

- 3 Join Camlock Ends**
Open each lock on the female Camlock by pushing on the red button and pulling lock outward. Then insert the male Camlock end firmly into the female Camlock end. Lock the ends together by pushing each lock back down until it clicks.

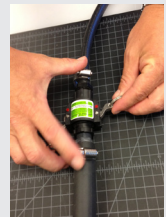

- 4 Repeat Process**
Repeat this process for each Camlock set to be installed.

REPLACEMENT PARTS:

DESCRIPTION	PART #
1/2" Camlock - Female End	490287
1/2" Camlock - Male End	490288
Insert Adapters 3/8" - 1/2"	490226
Insert Adapter 5/8" - 1/2"	490144
1" Stainless Hose Clamp	490229

PRODUCT WARRANTY:

All Camlock Connector Kits carry a 1-year warranty. Airmax® will repair or replace any kits found to be defective. This limited warranty is extended exclusively to the original purchaser and begins from the date of original shipment. Abuse, misuse or alterations of this product will void all warranty. Please contact your local dealer to obtain a Return Merchandise Authorization (RMA) Number prior to returning any product. Failure to request an RMA number may result in delay or dismissal of your warranty claim.

**THANK YOU FOR CHOOSING:
Airmax, Inc.**

15425 Chets Way Street, Armada, MI 48005
866-424-7629 | www.airmaxeco.com | contactus@airmaxeco.com

#510469 V2