


INSTALLATION INSTRUCTIONS

Ferrule Installation Kit
Item # 653178

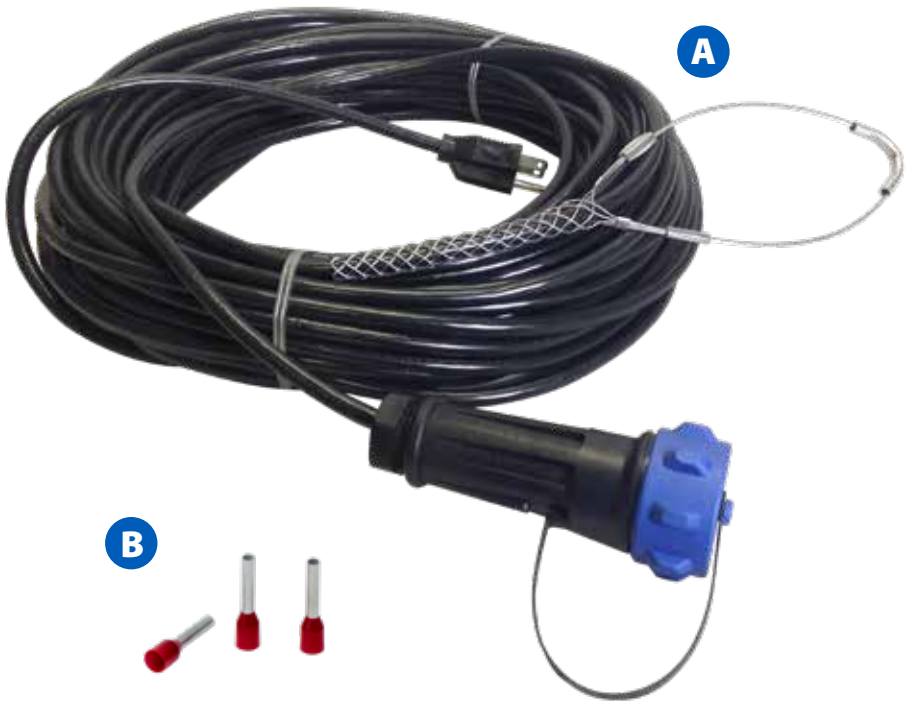

What's Included:

- A** Led Set Cord
- B** 3 Ferrules

Tools Required:

- Standard Wire Cutters
- Ferrule Crimpers
- Wire Strippers

Note: The ferrule kit is only to be used when hard wiring the light cord to a NEMA 3R control panel or similar hard wire application.

Installation Instructions

Warning: Always unplug the unit before any maintenance.

Step 1

Locate the black plug on the included light set cord. Use standard wire cutters to cut off the three prong plug end of the cord.



Step 2

Once the plug end has been removed, you will be able to locate the three wires within black outer insulation.



Step 3

Using wire strippers, strip back the black outer insulation 6" from the end. Then, strip back the individual wire insulation 1/2" from the end. This will expose 1/2" of the copper wire.



Step 4

Locate the 3 supplied ferrules and place one onto each of the copper wire ends. When properly installed, the red end of the ferrule will overlap the wire insulation while the silver end will encase the copper wire.



Step 5

Using a set of ferrule crimpers, crimp the ends of each of the three ferrules.



Step 6

Once crimping is completed you will be left with the necessary ends to continue installation of your fountain light set.



NOTES

THANK YOU FOR CHOOSING:

Airmax, Inc.

15425 Chets Way Street
Armada, MI 48005

866-424-7629
www.airmaxeco.com

#653179 V1.2